

Basic Adjustable Arms #38A/#38AG



Arm Height (Up/Down)

Type: Button

Press the button found beneath the armrest while grasping the armrest with both hands. Raise or lower each arm to desired height. Release the button.

Optional Arm Width (In/Out)

Type: Switch

Rotate the switch located beneath the arm forward. Use your hand to grasp the arm and adjust it out to your desired width away from seat. Each arm adjusts separately. When finished making adjustments, rotate the switch back to its original position.



< Watch our 38A/38AG
Online User Guide