


Satellite Assembly

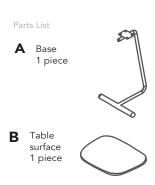

Tools included:

4 bolts


Allen wrench

1 - Align parts correctly

Align the widest edge of the table surface (**B**) to be perpendicular to the stem of the base (**A**).

2 - Attach the surface to the base From an upside down position, align the holes of

the base (A) to the holes of the table surface (B.) Place the 4 bolt (C) into the holes and using the Allen wrench to secure the base into the table surface.

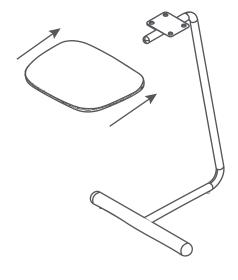

3 - Return table to upright position

The satellite table is ready for use

