




Tahoe flat backless bench assembly


TFC15, TFN15 flat backless bench.

Parts List

A Leg assembly
2 pieces

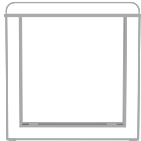

B Bench seat
1 piece

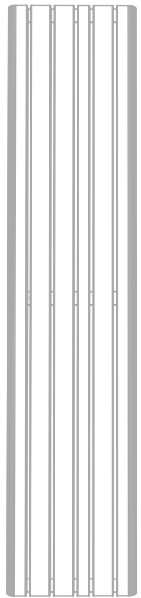

C TBEI
M8x10 screw
12 pieces



1 Unpack and prepare your components

Unpack your flat backless bench. Place pieces on a soft surface to protect the finish.

Two-person assembly is recommended.

2 Attach back panel to leg assemblies

Stand leg assemblies (**A**) on feet, parallel to each other, supported in the vertical position. Attach bench seat (**B**) to leg assemblies using three M8x10 screws (**C**) per side.

3 Tighten all screws

Enjoy your Tahoe bench with backrest!

